

Operating Instructions

Electronic Board (elite Panaboard)

Model No. UB-T880E
UB-T880EW



Stand is sold separately.

Installation Manual Included (for qualified service personnel)

- To assemble this unit, please refer to the Installation Manual on pages 35 through 55.
- Before operating this unit, please read these instructions completely and keep them carefully for future reference.
- This unit is designed for installation by a qualified servicing dealer.
Installation performed by non-authorized individuals could cause safety-related problems with the operation of this equipment.

For U.S.A. only:

- To locate the closest authorized dealer in your area, please call 1-800-449-8989.

Introduction

Thank you for purchasing the Panasonic Electronic Board.

For optimum performance and safety, please read these instructions carefully.

Feature Highlights

By connecting the elite Panaboard to a computer and using a projector to display the contents of the computer's screen on the elite Panaboard, you can do the following.

Touch and Electronic Pen Features

- Manipulate objects on the computer screen by using your finger as a mouse.
- Use the electronic pen to draw or erase lines on the computer screen and to select line colors and other options.
- Up to 3 people at once can draw or erase lines on the computer screen by using their fingers.
- Save what you draw on the computer screen as image files.
- Manipulate objects on the computer screen remotely by using the up and down buttons on the electronic pen.
- Supports Windows® 7 multi-touch functionality.

elite Panaboard book

Use the elite Panaboard book software that supports elite Panaboard operations, such as writing, drawing, attaching images and computer operations. This software lets you save the contents of the screen on your computer and retrieve it for later use.

USB Hub Features

The elite Panaboard comes with a USB hub as standard. By connecting equipment such as scanners, printers, or external USB memory sources, you can use their respective features directly with the elite Panaboard. Input from the USB peripheral can be easily incorporated in whiteboard presentations.

Usage Scenarios

For Education

- Create an effective learning environment by using your finger for direct control of a variety of educational software projected onto the elite Panaboard. Write or draw on software screens with your finger or the electronic pen.
- With several tools at your disposal for aiding in explanations, such as illustration and marker tools, you can keep students' attention through a dynamic screen display.
- Draw your students' interest by using the screen shade feature to show questions to students while hiding the answers, and incrementally showing the rest of the screen.
- The teacher can prepare materials before class to display on the elite Panaboard.

For Business

- Visually convey your product's characteristics and create an appealing product presentation by displaying images and using your finger or the electronic pen to highlight key points.
- Information projected on the elite Panaboard at your company—including what you add, using your finger or the electronic pen—can be displayed in real-time at remote locations using videoconferencing equipment.

Things you should keep a record of

Attach your sales receipt here

For your future reference	
Date of purchase	
Serial number	
Dealer's name	
Dealer's address	
Dealer's tel no.	

Abbreviations

Windows® refers to the Microsoft® Windows® operating system.
 Windows® XP refers to the Microsoft® Windows® XP operating system.
 Windows Vista® refers to the Microsoft® Windows Vista® operating system.
 Windows® 7 refers to the Microsoft® Windows® 7 operating system.
 DirectX® refers to the Microsoft® DirectX® application programming interface.

Trademarks

- Microsoft, Windows, Windows Vista, DirectX, Windows Media, and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- IBM is a trademark of International Business Machines Corporation in the United States, other countries, or both.
- Intel and Pentium are trademarks of Intel Corporation in the U.S. and other countries.
- Adobe, Reader and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- All other trademarks identified herein are the property of their respective owners.

Help of the Software

Instructions for elite Panaboard software and elite Panaboard book (included) are provided in the help information accompanying the software.

For details on accessing this information, see “Viewing the Help of the Software” (page 27).

Federal Communications Commission and Industry Canada Requirements

For United States and Canada Only

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Federal Communications Commission Requirements

For United States Only

Note

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Warning

To assure continued FCC compliance, the user must use only shielded interface cable and the provided power supply cord. Also, any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

RF Exposure Warning:

This Electronic Board may be used with below referenced optional low power 2.4 GHz USB Wireless Adaptor and Electronic Pen and may not be co-located or operated with any other antenna or transmitter. These transmitters comply with FCC radiation exposure limits set forth for uncontrolled environment/general population to meet the FCC radio frequency (RF) Exposure Guidelines in FCC/OET Bulletin 65, Supplement.

This satisfies RF exposure evaluation by calculated Maximum Permission Exposure (MPE) without the need for tested localized specific absorption rate (SAR) measurements.

Industry Canada Requirements

For Canada Only

This equipment complies with IC radiation exposure limits set forth for an uncontrolled equipment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

Warning about saving data

When the system storage device or any of its optional storage device is adversely effected by operational errors, static electricity, electrical noise, vibration, dust or when the power has been cut off due to malfunction, repair or inadvertently, the memory contents may be lost or changed. Before operating the system, make a point of reading the precautionary notes in the Operating Instructions and the help information, and observe them during operation.

Please observe carefully the following precaution:

- Make absolutely sure that all important data is saved by back-up or the original is saved.

The manufacturer hereby declares that it cannot be held accountable for any loss or change in any data stored on floppy disks, hard disks, optical disks, or other memory devices.

System Requirements

Computer	IBM® PC/AT compatible with a DVD-ROM drive
CPU	Intel® Pentium® 4 processor or later
Interface	USB 2.0

Note

- For details about the system requirements, refer to “Read Me First” (page 22) in the install menu of the included DVD-ROM.
- Even when the system requirements are met, the elite Panaboard response may be delayed or the electronic pen may malfunction if other applications, anti-virus software, etc. are active.

Exemption of Liability

Panasonic System Networks Co., Ltd. is not responsible for accidents or injuries caused by, but not limited to, the following:

1. Altering the device or improper installation construction.
2. Using the device for purposes beyond its intended use.
3. Earthquake, fire, flood, tidal wave, hurricane, lightning or other natural phenomena.
4. Natural aging of the building or similar phenomena.

For FRG Users (For Germany Only)

Note

Machine noise information regulation - 3.GPSGV, the maximum sound pressure level is 70 dB(A) or less, in conformity with EN ISO 7779.

This device is not intended for use in the direct field of view at visual display workplaces. To avoid incommoding reflexions at visual display workplaces this device must not be placed in the direct field of view.










Table of Contents

For Your Safety.....	8
For Your Safety.....	8
For Users.....	8
Safety Information (For United Kingdom only)	12
Precautions.....	13
Other Information	13
Usage	14
Included Accessories	14
Names and Uses of the Parts.....	15
Connecting External Components.....	18
Installing the Software	22
Setting the Projector	24
Using the elite Panaboard After Positioning the System (Calibration)	25
Viewing the Help of the Software.....	27
Uninstalling the Software	27
Download the Latest Software	27
Appendix.....	28
Daily Care	28
Cleaning the elite Panaboard	28
Replacing the Battery in the Electronic Pen	28
Replacing the Penpoint of the Electronic Pen	29
Troubleshooting	30
Specifications	32
Supplies & Accessories	34
Installation Manual	35
Installation Manual (for qualified service personnel).....	35
For Your Safety	35
Notice	35
Included Accessories	37
Wall Mounting Construction.....	39
Checking the Wall.....	39
Installing the Wall Mounting Plates.....	40
Wall Types and Installation Procedures	42
Stand KX-B061 Assembly (Sold Separately)	44
Included Parts.....	44
Assembly Instructions.....	45
Assembly Instructions	48
Preparing for Removing the elite Panaboard from Its Packaging.....	48
Assembling the elite Panaboard	49
Confirming the elite Panaboard Operation	54
Confirming the Interactive Features	54
Repackaging	55

For Your Safety

To prevent severe injury and loss of life, read this section carefully before using the unit to ensure proper and safe operation of your unit.

- This section explains the graphic symbols used in this manual.

 WARNING	Denotes a potential hazard that could result in serious injury or death.
 CAUTION	Denotes hazards that could result in minor injury or damage to the unit.
   	These symbols are used to alert operators to a specific operating procedure that must not be performed.
  	These symbols are used to alert operators to a specific operating procedure that must be emphasized in order to operate the unit safely.

For Users

WARNING

Power and Ground Connection



The power source voltage of this unit is listed on the nameplate. Only plug the unit into an AC outlet with the proper voltage. If you use a cord with an unspecified current rating, the unit or plug may emit smoke or become hot to the touch.



When you operate this product, the power outlet should be near the product and easily accessible.



To ensure safe operation the power cord supplied must be inserted into a standard three-prong AC outlet which is effectively grounded (earthed) through the normal wiring.



The fact that the equipment operates satisfactorily does not imply that the power point is grounded (earthed) and that the installation is completely safe. For your safety, if in any doubt about the effective grounding (earthing) of the power point, consult a qualified electrician.



If the plug cannot be inserted into the AC outlet, contact a licensed electrician to replace the AC outlet with a properly grounded (earthed) one.



Do not defeat the grounding (earthing) plug (ex. do not use a conversion plug).



Plug the power cord firmly into an AC outlet. Otherwise, it can cause fire or electric shock.



Do not pull, bend, rest objects on, or chafe the power cord and plug. Damage to the power cord or plug can cause fire or electric shock.



Do not attempt to repair the power cord or plug. If the power cord or plug is damaged or frayed, contact an authorized service representative for a replacement.



Ensure that the plug connection is free of dust. In a damp environment, a contaminated connector can draw a significant amount of current that can generate heat and eventually cause fire if left unattended over an extended period of time.



Never touch the plug with wet hands. Danger of electric shock exists.



Stop operation immediately if the unit emits smoke, excessive heat, abnormal smell or unusual noise. These conditions can cause fire or electric shock. Immediately turn the unit off and unplug the power cord, and contact your dealer for service.



When disconnecting the unit, grasp the plug instead of the cord. Pulling on a cord forcibly can damage it and cause fire or electric shock.



During thunderstorms, do not touch the unit and plug. It may cause an electric shock.

Installation and Relocation



Have the unit installed, removed and disposed of only by qualified service personnel.



When the unit will no longer be used, in order to prevent it from falling, do not leave the unit installed, but remove it. If the unit falls, it can cause injury.

Operating Safeguards



If metal fragments or water gets into the unit, turn the unit off and unplug the unit immediately. Contact your dealer for service. Operating the contaminated unit can cause fire or electric shock.



Never open or remove unit covers that are screwed with screws unless specifically instructed in the "Operating Instructions". A high-voltage component can cause electric shock.



Do not alter the unit or modify any parts. Alteration or modification can cause fire or electric shock.



CHOKING HAZARD

Keep the penpoint and battery out of reach of children to prevent swallowing.



Do not look into the lens while the projector is being used. Strong light is emitted from the projector's lens. If you look directly into this light, it can hurt and damage your eyes. Be especially careful not to let young children look into the lens. In addition, turn the projector off and unplug the power cord when you are away from the projector.

Battery



Use only the specified type of battery. Using the incorrect type of battery can result in overheating/burning or leakage of battery acid.



Make sure that the battery is installed with the correct polarity as indicated on the battery holder. Incorrectly installed batteries may burst or leak, resulting in injuries.



Do not use the damaged batteries. Using damaged batteries may result in leaking.



Do not charge, short, heat, break or throw in a fire, as it may result in the battery leaking, generating heat, or bursting.



When disposing of the battery, cover the battery contacts with insulation (ex. tape). Direct contact with other batteries may result in leaking, fire, or explosion.



Do not solder the battery, as it may result in the battery leaking, generating heat, or bursting.



Remove empty batteries immediately to avoid battery fluid leakage. Avoid contact of battery fluid with eyes, skin or clothing, as this may result in irritation or injury. In these cases, do not rub the affected area, and rinse thoroughly with clean water.

Electronic Pen / elite Panaboard



Do not use near medical equipment. (Do not bring into a surgery room, intensive care unit, critical care unit, etc.) Electromagnetic waves generated by this device can affect equipment, and can cause equipment to malfunction.



Do not use near automatic doors, smoke detectors and other automatically controlled equipment. Electromagnetic waves generated by this device can affect equipment, and can cause equipment to malfunction.



Use at least 22 cm (9 in.) away from pacemakers. Electromagnetic waves generated by this device can affect the operation of pacemakers.

CAUTION

Power



When the unit is not used over an extended period of time, switch it off and unplug it. If an unused unit is left connected to a power source for a long period, degraded insulation may cause electric shock, current leakage, or fire.



The unit should be used only with the power cord enclosed with the unit.

Installation and Relocation



Do not position the unit in a location where it is unstable.



Do not place the unit in a hot humid or dusty environment. Prolonged exposure to these adverse conditions may cause fire or electric shock.



To prevent fire or shock hazard, do not expose this unit to rain or any type of moisture.



When moving the unit, be sure to unplug the power cord from the AC outlet. If the unit is moved with the power cord attached, it can cause damage to the cord which could result in fire or electric shock.




Move this unit with two persons. Otherwise, this unit may fall down and cause injury.



After installing or moving the unit, lock the casters and set the fall-prevention extension legs.

Locking the casters
(Push to lock)

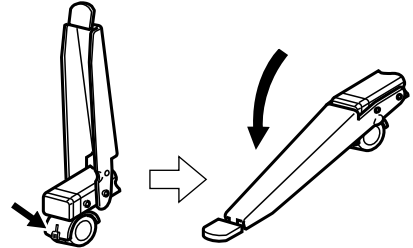

Operating Safeguards



If the unit falls down or gets damaged, turn the unit off and unplug the power cord. Otherwise, it may cause fire or electric shock.



Do not lean against the screen or on the cover (lower), even if the unit is mounted on the wall.



When using the stand, be sure to watch your step so that you do not bump into or trip over the fall-prevention extension legs.
The label of precautions is attached to the stand KX-B061 (sold separately).





When operating the screen board with your finger for a long time, be sure to take regular breaks. Continuous use for a long time may hurt your fingertip.

Battery



When the unit is not used over an extended period of time, take the batteries out of the unit. Otherwise, the batteries may leak. Do not use the leaked batteries.

Safety Information (For United Kingdom only)

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 5 amp fuse is fitted in this plug. Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 5 amps and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse. If the plug contains a removable fuse cover, you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local Panasonic Dealer.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR PREMISES, THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below. If in any doubt, please consult a qualified electrician.

WARNING


This appliance must be earthed.

IMPORTANT

The wires in this mains lead are coloured as follows:

Green-and-Yellow:	Earth
Blue:	Neutral
Brown:	Live

 
As the colours of the wire in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire that is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the Earth symbol  or coloured GREEN or GREEN-AND-YELLOW.

The wire that is coloured BLUE must be connected to the terminal in the plug that is marked with the letter N or coloured BLACK.

The wire that is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

How to replace the fuse:

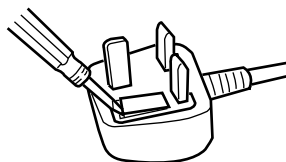

Open the fuse compartment with a screwdriver and replace the fuse and fuse cover.

Precautions

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

About Using the Battery

If a battery is used improperly, the battery may leak, causing corrosion of the unit, or it may burst. To prevent this, always follow the precaution given below.

- If the electronic pen ceases to function because the battery has run out, remove it immediately and dispose of it according to local regulations. Leaving a drained battery in the electronic pen may result in leakage.

About Disposing of the Battery

For Taiwan (台灣)



廢電池請回收

Other Information

Usage Note

Operating the elite Panaboard near electrical appliances may cause interference. Move away from the electrical appliances such as TVs, radios, cordless phone, or wireless devices.

MEDICAL




 
 
 

 
 
Consult the manufacturer of any personal medical devices, such as pacemakers, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 2.402 GHz to 2.481 GHz, and the power output level is 0.001 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.

No responsibility will be taken by our company with respect to consequences resulting from the use, damage or both of the equipment.

Included Accessories

Check that all of the following items are included with your elite Panaboard.
In the event that an item is missing, please contact your dealer.

List of Accessories

Power Cord (3 m [9 ft. 10 1/8 in.])	1	USB Cable (5 m [16 ft. 4 7/8 in.])	1	Software DVD-ROM	1
					
AAA Battery (LR03) (Disposable)	1	Electronic Pen	1	Penpoint (Replacement)	1
					
Operating Instructions (this document)	1	Warranty	1	2.4 GHz USB Wireless Adaptor*	1
					

* A 2.4 GHz USB Wireless Adaptor is preinstalled on the elite Panaboard.
FCC ID: ACJ5Z6UE-608049 / IC: 216A-UE608049

Note

- The illustration of the power cord shown above is for the United States. The shape of the plug may vary depending on country/area.
- Stand is sold separately.
- Store the extra penpoint along with this operating manual.
- Replacement penpoints are available for purchase separately (page 34).
- The warranty may not be included depending on country/area.


About Using the DVD-ROM

To prevent damage to the DVD-ROM:

- Do not touch or write on the surface of the disc.
- Do not leave the disc out of the protective case.
- Do not leave the disc in the direct sunlight or near heat sources.
- Do not place heavy objects on the disc case or drop the case.
- To clean the disc, hold the disc by its edges and wipe it from the center to the edges with a dry, soft cloth.

Names and Uses of the Parts

Screen

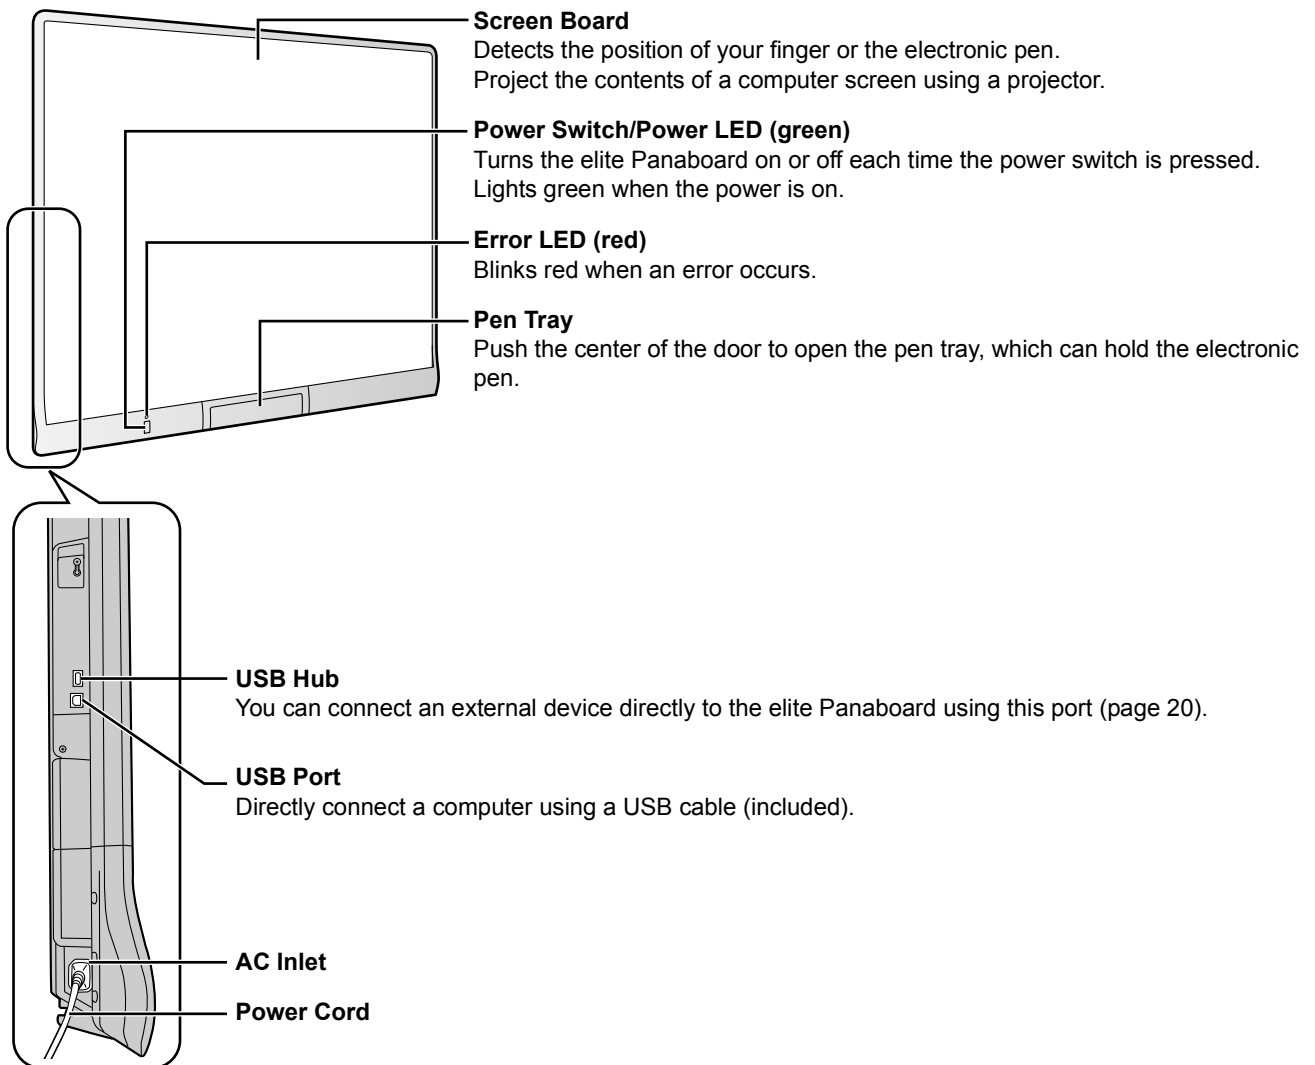


Notice

- The operation of external devices connected via the USB hub is not guaranteed.
- External devices connected via the USB hub that require a lot of power, such as scanners or CD/CD-Rs, may not operate properly. For more information, please consult the relevant dealer.
- When the elite Panaboard is used while the peripheral connected to the USB hub is operating, the response of the elite Panaboard may be delayed and the electronic pen may malfunction. If such problems occur, connect the peripheral directly to the computer.

Note

- The elite Panaboard detects a change in electrostatic capacitance when touched by your finger. For this reason, it may not react to fingernails, gloved hands, or the electronic pen when a glove is worn.
- If you touch multiple points in a close area (within 10 cm [4 in.]), this may be recognized as a single point, or freehand lines may be drawn connected or intersecting.



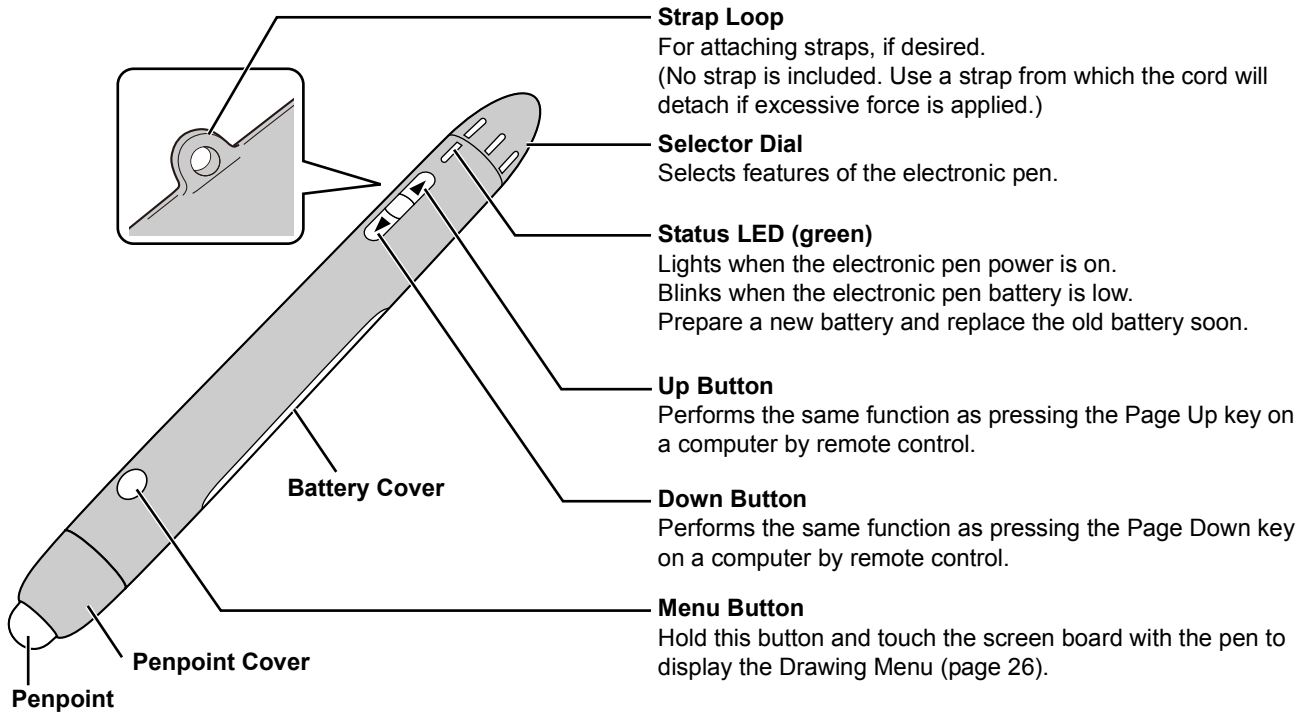


Electronic Pen



Note

- The up and down buttons can be used in a range of approximately 10 m (approximately 30 ft.) from the elite Panaboard (without obstructions).


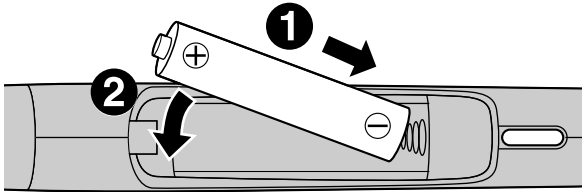
Electronic Pen Features

 Black/Red/Blue/Green	Draws with a marker in the selected color. Marker line thickness and other settings can be specified in the Drawing Menu.
 Eraser	Erases marker lines that you have drawn. Eraser size and other settings can be specified in the Drawing Menu.
 Yellow/Yellowish Green/Pink	Highlights with a highlighter in the selected color. Highlighter line thickness and other settings can be specified in the Drawing Menu.
 Mouse	Operates in the same way as using your finger.
 Low-Power Mode	Puts the electronic pen in low-power mode. The pen detects motion to turn itself on or off automatically. To conserve battery power, put the pen in low-power mode before carrying it while walking, when it is not in use.

Notice

- When the electronic pen and your finger are used simultaneously, the elite Panaboard can not recognize these separately. Wait 1 second or more when changing between your finger and the electronic pen. When changed in a shorter time or when the electronic pen and your finger touch simultaneously, the result is according to which one the elite Panaboard recognized first.
- Confirm that the status LED lights when using the electronic pen.
- To avoid operating errors, do not touch the penpoint when the electronic pen is not in use.

Inserting (Replacing) Batteries

<p>1. Unlock the battery cover (❶), and open the cover (❷).</p>  <p>❶: A small tab on the right side of the battery cover is pushed outwards. ❷: The cover is lifted upwards from the main body of the pen.</p> <p>• When replacing the cover, follow the procedure in reverse.</p>	<p>2. Insert (replace) the battery, and then reattach the cover and lock it.</p>  <p>❶: A AAA alkaline battery is inserted into the compartment with the positive (+) terminal facing the correct direction. ❷: The battery cover is lowered back into place and locked.</p> <p>• Make sure to use a AAA alkaline battery, and ensure that ⊕ and ⊖ face the correct directions. • Dispose of expired batteries quickly, by covering the terminals in tape and following the disposal regulations in your country/area.</p>
---	---

Registering the Electronic Pen

The elite Panaboard automatically detects electronic pens within approximately 10 m (approximately 30 ft.), but if other electronic whiteboards are nearby, electronic pens for those whiteboards may be detected accidentally. Similarly, other electronic whiteboards may detect electronic pens for the elite Panaboard. In the following cases, register the electronic pen to the elite Panaboard.

- Buttons on the electronic pen are unresponsive
- The elite Panaboard responds as if you were operating it, but you are not
- The elite Panaboard operation is erratic

Once you register an electronic pen, it cannot be used with another electronic whiteboard.


To use registered electronic pens with another electronic whiteboard, unregister the pens.

See “Registering the Electronic Pen” and “Unregistering the Electronic Pen” in “Software Help” for instructions on registering and unregistering the electronic pen.

For details on accessing the help information, see “Viewing the Help of the Software” (page 27).


Connecting External Components

1. Connect the power cord (included) to the elite Panaboard, and plug the power cord into an AC outlet.

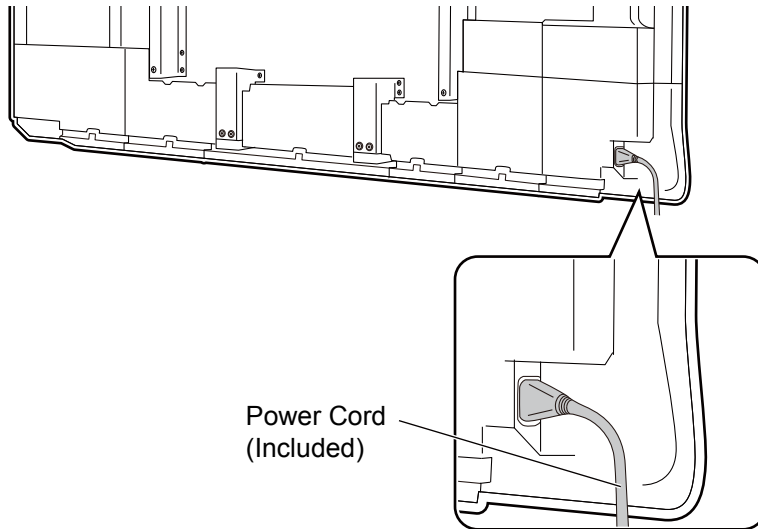


- Plug the power cord into an outlet that is close to the elite Panaboard and in a location that is easy to unplug.
- If you are using the optional stand, plug the power cord into the AC inlet, and secure the cord as shown in the illustrations below.

When attaching the power cord downward.

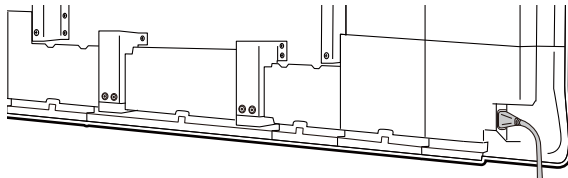

When attaching the power cord along the lower side of the elite Panaboard.

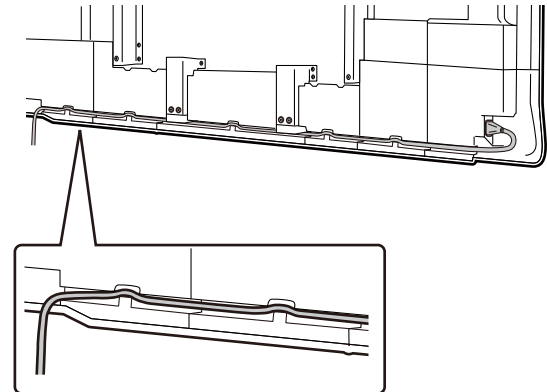

• About Grounding

If you cannot connect the grounding line, contact your dealer. The cost of installing a grounding connection is not included in the price of the elite Panaboard.


- **The included power cord is exclusively for use with the elite Panaboard. Do not use it with any other devices.**

2. Connect the elite Panaboard to a computer using the USB cable (included).

- elite Panaboard: Plug the B connector (smaller connector) into the elite Panaboard's USB port.
- Computer: Plug the A connector (larger connector) into a USB port on the computer.
- Do not connect the elite Panaboard via a USB hub. This could result in erroneous operation.

Notice


- Do not connect the elite Panaboard to a computer via USB unless elite Panaboard driver/software/book is installed.
Only connect the USB cable after following the steps in "Installing the Software" (page 22) to install the software.

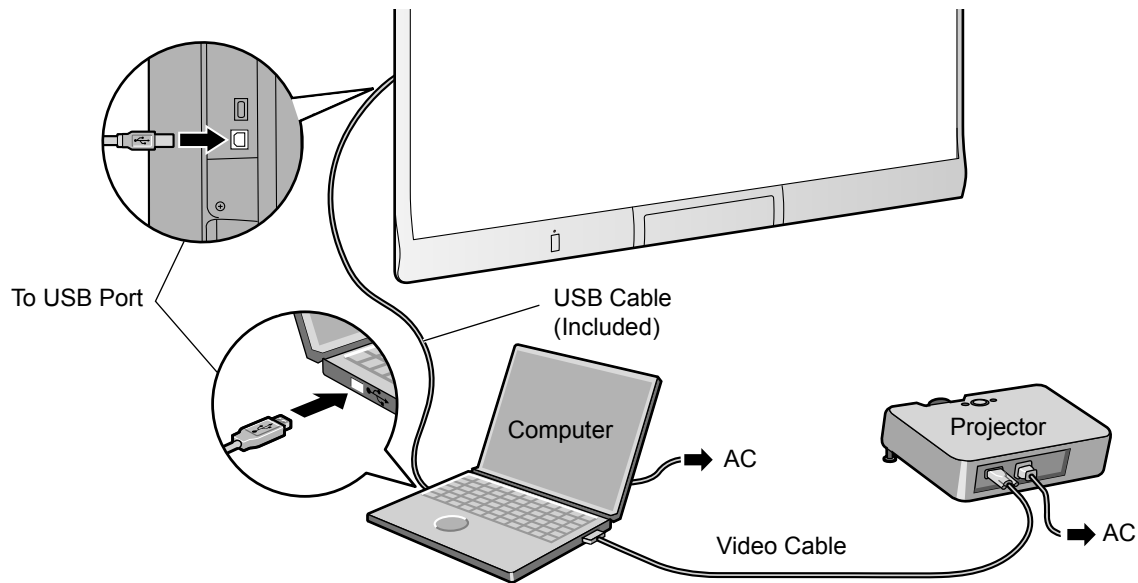**3. Connect the computer to a projector.**

- For instructions on connecting your computer and projector, refer to the respecting instruction manuals.

Connecting an External Device

1. **Connect the external device to the elite Panaboard using a USB cable (sold separately).**
 - elite Panaboard: Plug the A connector (larger connector) into the elite Panaboard's USB port.
 - External device: Plug the B connector (smaller connector) into a USB port on the external device.

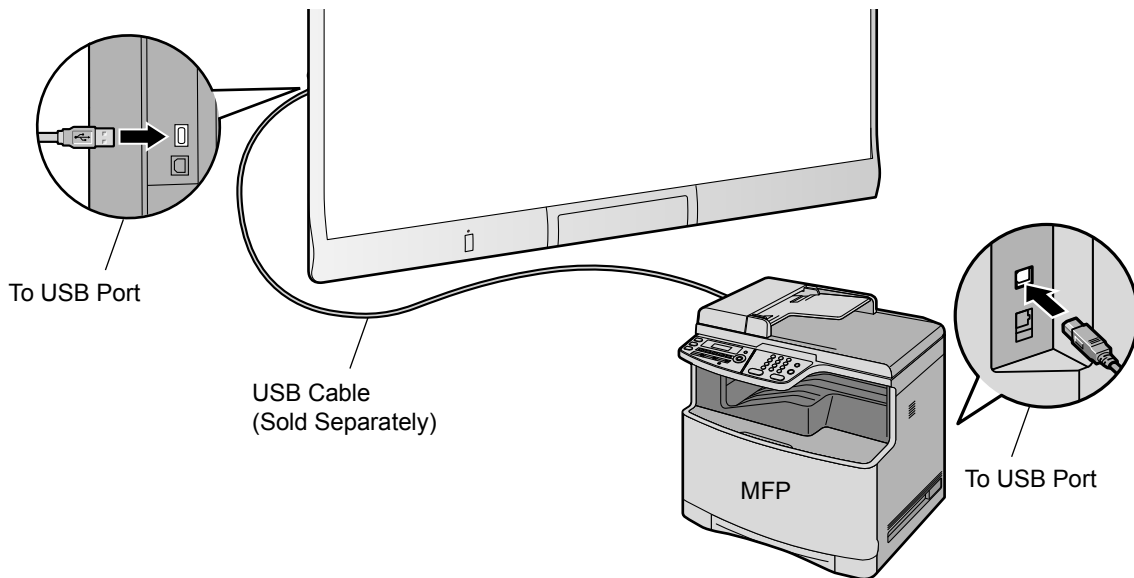

About the Usage Location

- Do not place the elite Panaboard where it is directly exposed to sunlight.
- Do not use the elite Panaboard in a location less than 10 °C (50 °F) or in a location subject to extreme changes in temperature.

Note

- The elite Panaboard may not work properly when used in one of the above locations.
- Operating the elite Panaboard near electrical appliances may cause interference. Move away from the electrical appliances.

Power Switch



- After turning the elite Panaboard off, wait more than 2 seconds before turning it back on.

Moving the elite Panaboard When Using the Stand (Sold Separately)

1. After confirming that the power is off, disconnect the power cord and USB cable.
2. Release the locks on the casters.

Note

- When folding back the fall-prevention extension legs, release the lock as follows (❶, ❷).

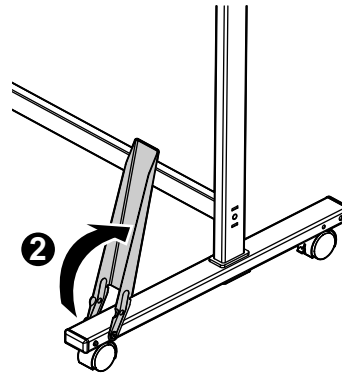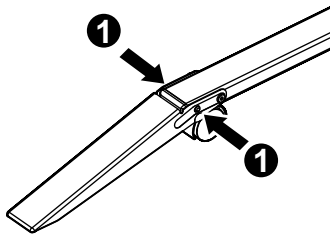


3. Move the elite Panaboard, avoid banging or shaking the board.

Notice

- Always move the elite Panaboard with 2 people.
- Do not drag or step on the cable.

4. Lock the casters.
5. Pull the fall-prevention extension legs down.

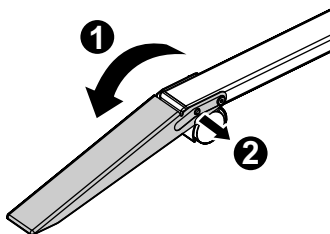


Installing the Software

To install the elite Panaboard driver/software/book, follow the procedure below.

Notice

- Do not connect the USB cable until the installation is completed.
 - Do not connect more than 1 elite Panaboard to the same computer.
(Doing so can cause erroneous behavior on the computer.)
1. **Turn on your computer and start the Windows operating system.**
 - Log into an account with Administrator privileges.
 2. **Insert the included DVD-ROM into the DVD-ROM drive.**
 - The setup screen will be displayed.
 - If the setup screen does not appear, select your DVD-ROM drive in Explorer and double-click [Menu.exe].
 - In Windows Vista or Windows 7, if the Autoplay dialog box is displayed, click [Run Menu.exe].
 3. **When the “elite Panaboard” screen is displayed, click the type of device you are using.**


4. **When the “Menu” screen is displayed, click [Read Me First].**

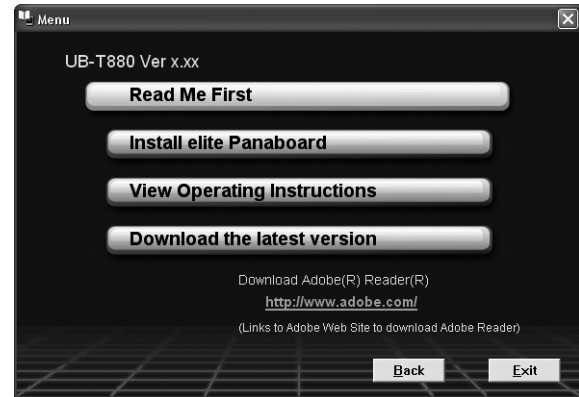

- After the system requirements are displayed, make sure that your computer meets the requirements.
5. **Click [Install elite Panaboard] on the “Menu” screen.**
 6. **If you agree to the terms in the “License Agreement”, click [Yes].**
 - In Windows Vista, if the “User Account Control” window is displayed, click [Continue] to continue with the installation.
 - In Windows 7, if the “User Account Control” window is displayed, click [Yes] to continue with the installation.
 7. **When the “Select Features” screen is displayed, select the required function or deselect a function that you do not want and then click [Next].**
 - Click the corresponding check box to select or deselect a function.
 - You cannot deselect a function that is shown with a gray check box because it is a mandatory function.
 - When you deselect a function that is already installed, this function will be deleted (uninstalled).

8. When the following screen is displayed, confirm that the USB cable is not connected to your computer or the elite Panaboard, and click [OK].

- If the USB cable is connected to the elite Panaboard, disconnect the cable, and click [OK].
- If Microsoft® .NET Framework 3.0 (SP 2 or later) or 3.5 (SP 1 or later) is not installed, an installation screen will be displayed. Follow the on-screen directions to install these components.

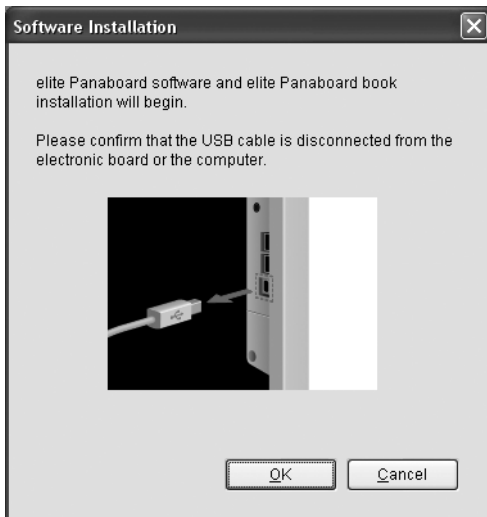

9. When the installation wizard is displayed, follow the on-screen instructions and continue with the installation.

10. When installation has finished, click [Finish].

- Restart your computer if you are prompted to do so.
- The group [elite Panaboard] will be created in the [Panasonic] group in the program menu.
- The following items will appear in the [elite Panaboard] group (A function that you deselected on the "Select Features" screen in step 7 will not be displayed.):
 - elite Panaboard software
 - elite Panaboard book
 - Electronic Pen Registration Tool
 - Operating Instructions
 - Software Help
 - Download the latest version

Note

- To view the Operating Instructions, you must have Adobe® Reader® installed on your computer. If your computer is connected to the Internet, you can download Adobe Reader from Adobe's web site.

Setting the Projector


Set up your projector as instructed below.

About Positioning the Image


- When you are projecting an image, make sure the image is inside the screen frame.

Project the Image as a Rectangle

- Adjust the location of the projector to project at a right angle with the elite Panaboard.

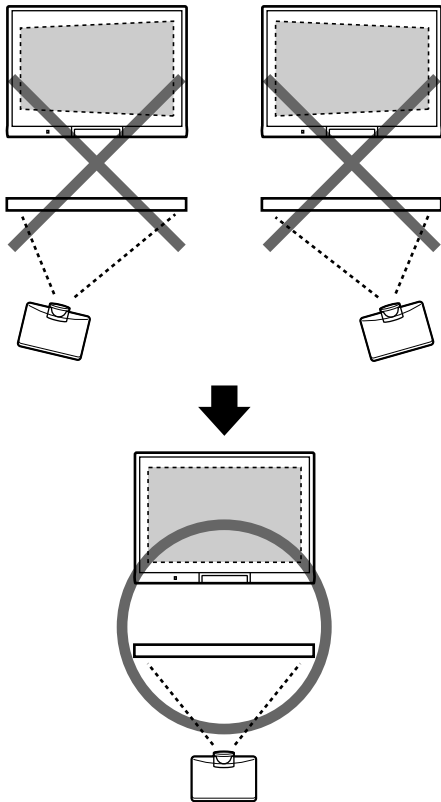

- If the image is projected trapezoidally, the position may not be read correctly. Adjust the projector so that the projected image is a rectangle. Refer to your projector's documentation for information on adjusting the projected image.

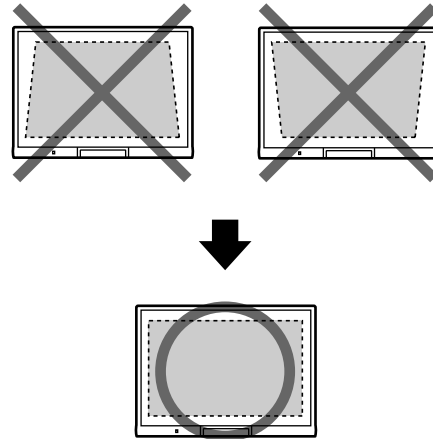

Set the Proper Resolution

- Set your computer's and projector's resolutions to the most appropriate setting. If the resolution is not set properly, the image will be difficult to see. Particularly, if the projector's resolution is lower than the computer's, thin lines can appear cut or broken. Refer to your projector's documentation for information on adjusting the resolution.

Do Not Look Directly into the Projector Lamp

- When using a projector, try to avoid looking directly into the projector lamp. Doing so can hurt your eyes.

Using the elite Panaboard After Positioning the System (Calibration)

About Calibration

Calibration refers to setting up the elite Panaboard and projector so that lines and comments drawn with your finger or the electronic pen are displayed in the correct position. Be sure to perform calibration before use. After you have set up the elite Panaboard, project an image onto the screen board and use the elite Panaboard software installed on your computer to perform calibration.

Performing Calibration


When the elite Panaboard is connected to your computer, the calibration screen is automatically displayed.

1. **Turn on the elite Panaboard.**
2. **Connect the elite Panaboard to your computer with the USB cable.**
 - The calibration screen is displayed.
 - When the elite Panaboard software is installed on your computer, the calibration screen is automatically displayed after the elite Panaboard software starts.
 - Restart your computer if you are prompted to do so. After the computer has restarted, connect the elite Panaboard to your computer with the USB cable.

3. **Calibrate the equipment by using your finger to touch the center of the indicated points following the instructions on the screen for about 2 seconds each.**



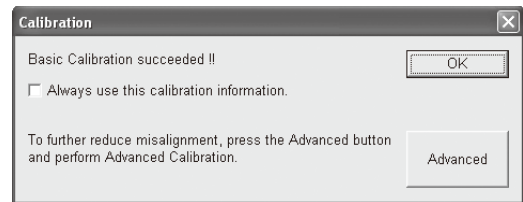


- Touch the screen board at a right angle with your finger.
- After you touch an indicated point correctly, the next point is shown automatically.
- When calibration has finished normally, a completion dialog box is displayed.



4. **If the edges of the image projected on the elite Panaboard are curved, click [Advanced] to perform Advanced Calibration. (Go to the next step if not required.)**
 - Advanced Calibration reduces misalignment of a projected image.
5. **Click [OK].**
 - If the elite Panaboard and projector are fixed so that they will not move (Wall mounted case), select the [Always use this calibration information.] check box, and click [OK] to skip calibration from the next time you start the elite Panaboard software.

Starting the elite Panaboard software

When the elite Panaboard software is installed, the  icon is displayed in the notification area when calibration is finished, and you can use the elite Panaboard software.

- To display the Select Function Menu, click the Menu Start Tab (left side:  / right side: ) on the screen with your finger.




Example of the Select Function Menu

- To display the Drawing Menu, touch the screen board while holding the menu button on the electronic pen.



Example of the Drawing Menu

Note



- When the elite Panaboard software is not installed, the  icon is not displayed in the notification area. The Menu Start Tab and Drawing Menu of the electronic pen are not displayed on the screen.
- For detailed information about using the elite Panaboard software, refer to the help menu. For details on accessing the help information, see “Viewing the Help of the Software” (page 27).

After Calibration


Do Not Move the elite Panaboard or the Projector

- The following changes will bring the position of projection out of alignment with the position of your finger or the electronic pen, and you will need to recalibrate the equipment.
 - The location of the projector changed.
 - The location of the elite Panaboard changed.
 - The image area or placement was changed due to changes in the zoom, focus, etc.
 - The resolution of the projector or the computer changed.
- If you are using the elite Panaboard installed on a stand, be aware that accidentally hitting the elite Panaboard or pushing too strongly with the electronic pen while operating can move the stand's position, which will result in misalignment of the projected image and the electronic pen's position.
- Make sure to lock the stand's casters when using the elite Panaboard, as failing to do so can cause misalignment.

Performing the Recalibration (Displaying the Calibration Screen Manually)

- When the elite Panaboard software is already installed:
 - Click the  icon in the notification area and click [Calibration] in the pop-up menu.
- When the elite Panaboard software is not installed:
 - Double-click the desktop icon of  (elite Panaboard Calibration Tool).

Exiting the elite Panaboard software


Click on the  icon in the notification area, and select [Exit] from the menu.

Viewing the Help of the Software

Follow the procedure below to view the help of the software installed on your computer.

1. Turn on your computer and start Windows.
2. Open “Software Help” from the Start menu.
([Start] → [All Programs] → [Panasonic] → [elite Panaboard] → [Software Help])
 - General help information of the installed software is displayed.

Note

- To access the help information of elite Panaboard software and Electronic Pen, click the  icon in the notification area and select [Help] from the pop-up menu.
- To access elite Panaboard book help information, select [Help...] from the elite Panaboard book [Help] menu.
- We recommend that you view the help using Internet Explorer® 6.0 or later for Windows.

Uninstalling the Software

If it is necessary to uninstall the elite Panaboard driver/software/book, follow the procedure below.

1. Turn on your computer and start Windows.
 - Log into an account with Administrator privileges.
2. Select [Add or Remove Programs] from the Control Panel.
 - In Windows Vista or Windows 7, select [Uninstall a program].
3. Select Panasonic elite Panaboard, then remove it.
4. Follow the on-screen instructions.
5. When uninstallation is complete, restart your computer.

Download the Latest Software


Follow the procedure below to download the latest version of the software from the download web site.

1. Turn on your computer and start Windows.
2. On the Start menu, point to [All Programs] → [Panasonic] → [elite Panaboard], and click [Download the latest version].

Daily Care

When cleaning the elite Panaboard or inside the elite Panaboard, make sure to switch off the power and unplug the power cord from the AC outlet.

Cleaning the elite Panaboard

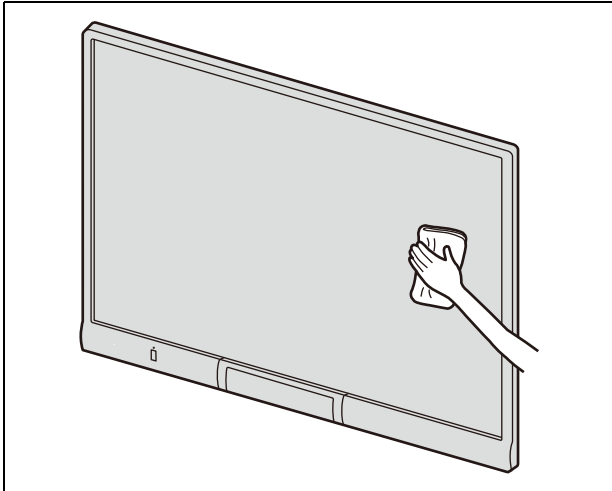

Gently wipe the elite Panaboard with a soft, moist cloth.

Notice

- The elite Panaboard is designed exclusively for projector images.
To remove marks written with a whiteboard marker or stubborn stains, use whiteboard cleaner or neutral household detergent diluted with water.
- Do not use thinner, benzene, or abrasive chemicals to clean.
(Doing so can result in discoloration.)

Replacing the Battery in the Electronic Pen

When the electronic pen battery is low, the pen status LED blinks. Continued use of the electronic pen can lead to poor performance. Replace the battery as soon as possible. See “Inserting (Replacing) Batteries” (page 17) for details on replacing the battery.

- Dispose of expired batteries quickly, by covering the terminals in tape and following the disposal regulations in your country/area.

For Taiwan (台灣)




廢電池請回收


Replacing the Penpoint of the Electronic Pen

As the penpoint of the electronic pen becomes worn, the penpoint will no longer slide easily across the surface. Continuing to use the electronic pen in this condition may make the screen dirty and cause malfunction. Replace the penpoint with a new one as soon as possible.


1. Remove the penpoint cover.

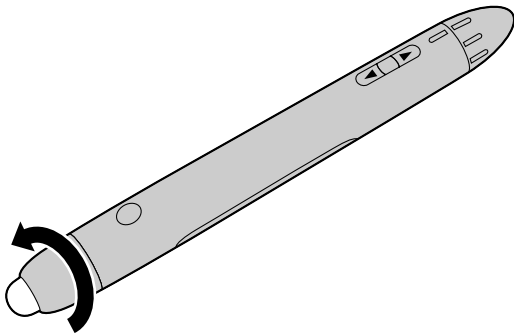

2. Remove the old penpoint and attach the new one.

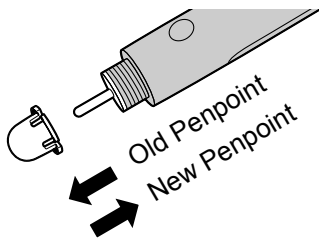

3. Reattach the penpoint cover.

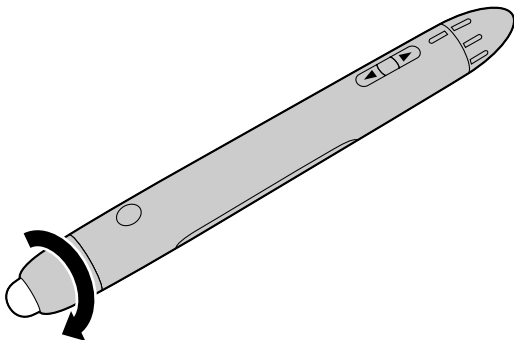

Troubleshooting

When experiencing problems, please refer to the table below for possible solutions. If the problem persists, contact your dealer.

Symptom	Possible cause and solution	See page
The LEDs do not light when the power switch is turned on.	Check that the power cord is properly plugged in. → If the problem persists, unplug the cord momentarily, wait about 2 seconds, and plug it in again.	—
The Error LED (red) blinks twice repeatedly at about 1-second intervals.	You turned on the power switch while touching the screen board. → Do not touch the screen board for about 3 seconds after turning on the power switch. If the Error LED (red) continues to blink even after you turn the power switch off and then on again, contact your dealer.	—
Error LED (red) is blinking.	Turn off the power, and turn it on. → If the problem persists, contact your dealer.	—
The computer does not recognize the elite Panaboard.	<ul style="list-style-type: none"> The elite Panaboard and your computer are not connected. → Securely connect the elite Panaboard and your computer using a USB cable. The USB cable is connected to a USB hub. → Do not connect the elite Panaboard through a USB hub. 	—
The connection between the computer and the elite Panaboard is unexpectedly lost.	Check that the elite Panaboard is in an operable state, and that the USB cable is properly connected.	—
The elite Panaboard response is delayed.	Other applications or anti-virus software are active. → Shut down the other applications and anti-virus software.	5
In Windows 7, there is a considerable delay in the elite Panaboard response when you touch the screen board with your finger.	The USB operation is erratic. → Unplug and reconnect the USB cable.	—
The point of control is out of alignment with your finger or the electronic pen.	<ul style="list-style-type: none"> The projected image is misaligned. → Perform the calibration again. The edge of the projected image is curved. → Perform Advanced Calibration. 	25
Lines or comments drawn with your finger are not shown on the computer screen.	<ul style="list-style-type: none"> You are touching the screen board with a part of your hand other than your finger. → Use only your finger tip to touch the screen board. You are touching too lightly with your finger. → Touch the screen board more firmly. 	—

Symptom	Possible cause and solution	See page
The electronic pen loses the functions. (Buttons are unresponsive.) (Lines written with the electronic pen are broken or colors change.)	<ul style="list-style-type: none"> You are using the electronic pen and your finger simultaneously. → While you operate the elite Panaboard with your finger, the electronic pen produces the same result as when touching the elite Panaboard with your finger. After operating with your finger, wait 1 second or more before using the electronic pen. Other applications or anti-virus software are active. → Shut down the other applications and anti-virus software. The electronic pen is low on batteries. → Replace the electronic pen's battery. The electronic pen is in low-power mode. → Turn the selector dial to change the mode. The peripheral is connected to the USB hub. → Connect the peripheral directly to the computer. Another electronic whiteboard is in use nearby. → Use the Electronic Pen Registration Tool to register the electronic pen. See "Registering the Electronic Pen" in "Software Help" for instructions on registering the electronic pen. 	17 5 17 16 15 —
The electronic pen status LED is blinking.	The electronic pen is low on batteries. → Replace the electronic pen's battery.	17
Marks written with a whiteboard marker cannot be erased.	Because the elite Panaboard is designed exclusively for projector images, you cannot erase the marks with a standard eraser. → Use commercially available whiteboard cleaner or neutral household cleaner diluted with water.	28
The external device connected to the USB hub does not work properly.	<ul style="list-style-type: none"> The elite Panaboard and the external device is not connected. → Securely connect the elite Panaboard and the external device. A driver or application for enabling the use of external device may not be installed on your computer. → Install the driver or application following the instructions in the manual for the external device. 	—

Specifications

Model Number	UB-T880E / UB-T880EW	
General	Power	AC 100 V–240 V, 50 Hz/60 Hz
	Power Consumption	During Operation: 0.5 A (When power is OFF by the power switch: 0.2 W)
	Operating Environment	Temperature: 10 °C to 35 °C (50 °F to 95 °F) Humidity: 30 % to 80 %
	Storage Environment	Temperature: -20 °C to 40 °C (-4 °F to 104 °F) Humidity: 15 % to 80 %
	Interface	USB 2.0
	No. of Hub Ports	1 port
Electronic Pen	Transmission System	GFSK
	Electronic Pen Power	LR03 (AAA alkaline dry cell battery) × 1
	Electronic Pen Battery Life	30 hours (when used continuously at 25 °C [77 °F]) * When using Panasonic LR03 alkaline dry-cell batteries.

Model Number	UB-T880E	
General	External Dimensions: Height × Width × Depth	1,320 mm × 1,657 mm × 117 mm (4 ft. 4 in. × 5 ft. 5 1/4 in. × 4 5/8 in.)
	Weight	36 kg (79.4 lbs)
Input Unit	Screen Board Size: Height × Width	1,175 mm × 1,602 mm (3 ft. 10 1/4 in. × 5 ft. 3 1/16 in.)
Interactive Features	Effective Area: Height × Width	1,175 mm × 1,567 mm (3 ft. 10 1/4 in. × 5 ft. 1 11/16 in.) (77 in. diagonal)

Model Number	UB-T880EW	
General	External Dimensions: Height × Width × Depth	1,320 mm × 1,900 mm × 117 mm (4 ft. 4 in. × 6 ft. 2 13/16 in. × 4 5/8 in.)
	Weight	39 kg (86 lbs)
Input Unit	Screen Board Size: Height × Width	1,175 mm × 1,845 mm (3 ft. 10 1/4 in. × 6 ft. 5/8 in.)
Interactive Features	Effective Area: Height × Width	1,036 mm × 1,842 mm (3 ft. 4 3/4 in. × 6 ft. 1/2 in.) (83 in. diagonal)

Supplies & Accessories

Optional Device	Stand	KX-B061
	Electronic Pen	UE-608026
	Up / Down Unit	UE-608030
	Stand Table Unit	UE-608031
	Short-Throw Arm Unit	UE-608032
Consumables	Penpoint (Replace the penpoint after it has become worn and no longer slides across the surface.)	UG-6026

- To purchase separately sold items, contact your dealer.








Installation Manual (for qualified service personnel)

- Request assembly of the Electronic Board, stand and wall mounting from your dealer.
- Before constructing or installing the elite Panaboard, please read "Installation Manual (for qualified service personnel)" carefully. Panasonic System Networks Co., Ltd. cannot be held responsible for accidents or damage to property resulting from incorrect installation.
- **Please read "For Your Safety" (pages 8–13 and pages 35–36) carefully and install the elite Panaboard safely.**
- When installing the elite Panaboard on a wall or on the stand, perform installation with 2 people.

For Your Safety

To prevent severe injury and loss of life, read this section carefully before using the unit to ensure proper and safe operation of your unit.

The following graphic symbols are used in this Installation Manual.

 WARNING	Denotes a potential hazard that could result in serious injury or death.
 CAUTION	Denotes hazards that could result in minor injury or damage to the unit.
 	These symbols are used to alert operators to a specific operating procedure that must not be performed.
  	These symbols are used to alert operators to a specific operating procedure that must be emphasized in order to operate the unit safely.

Notice

WARNING



Safety check must be done by qualified service personnel after installing this option.



Be sure to disconnect the power cord while installing the unit. Otherwise, it may cause electric shock or injury.



Be sure to use the specified parts for the installation. Otherwise, it may cause fire, electric shock or injury.



Notes in the operating instructions or notes of labels on the cabinet, chassis or parts should be observed.



Do not alter the unit and install. Installing an altered unit can cause fire, electric shock or injury.



Have the unit installed, removed and disposed of only by qualified service personnel.



To ensure safe operation the power cord supplied must be inserted into a standard three-prong AC outlet which is effectively grounded (earthed) through the normal wiring.



The fact that the equipment operates satisfactorily does not imply that the power point is grounded (earthed) and that the installation is completely safe. For your safety, if in any doubt about the effective grounding (earthing) of the power point, consult a qualified electrician.

Electronic Pen / elite Panaboard



Do not use near medical equipment. (Do not bring into a surgery room, intensive care unit, critical care unit, etc.) Electromagnetic waves generated by this device can affect equipment, and can cause equipment to malfunction.



Do not use near automatic doors, smoke detectors and other automatically controlled equipment. Electromagnetic waves generated by this device can affect equipment, and can cause equipment to malfunction.




Use at least 22 cm (9 in.) away from pacemakers. Electromagnetic waves generated by this device can affect the operation of pacemakers.



CAUTION



After installing or moving the electronic board, lock the casters and set the fall-prevention extension legs.

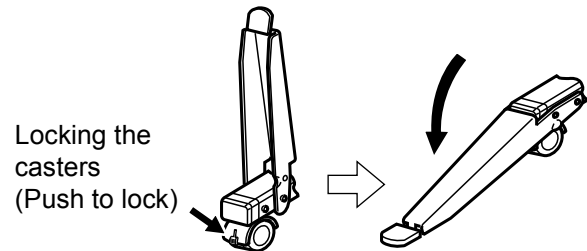

If the unit is hung on a wall, confirm the wall must be capable of supporting at least the following weight.

1,962 N (200 kgf)



Do not attach the electronic board to mortared walls. Accidental electric leakage from the wall mounting plate bolts to metal laths or wire laths can cause heat, smoke or fire.



 


 
 
 
 

 

Confirm the bolts of the unit are certainly caught by the wall mounting plate by pulling the unit after hanging the unit on the wall mounting plate if the unit is mounted on a wall.




Be sure to put on a glove to avoid electric shock or injury.

Included Accessories

Confirm that the following items are included with the elite Panaboard.

No.	Part Name	Illustration	Q'ty	Remarks
①	Power Cord (3 m [9 ft. 10 1/8 in.])		1	The illustration of the power cord is for the United States. The shape of the plug may vary depending on country/area.
②	USB Cable (5 m [16 ft. 4 7/8 in.])		1	For computer connection
③	DVD-ROM		1	Operating Instructions Drivers Application software
④	Wall Mounting Plate (Left)		1	—
⑤	Wall Mounting Plate (Right)		1	—
⑥	Battery (LR03 AAA alkaline battery)		1	For electronic pen
⑦	Electronic Pen		1	—
⑧	Penpoint (Replacement)		1	For electronic pen
⑨	2.4 GHz USB Wireless Adaptor		1	A 2.4 GHz USB Wireless Adaptor is preinstalled on the elite Panaboard. FCC ID: ACJ5Z6UE-608049 / IC: 216A-UE608049
⑩	Operating Instructions		1	Operating Instructions (includes Installation Manual)

 No.	Part Name	Illustration	Q'ty	Remarks
⑪	Warranty		1	May not be included depending on country/area.

Notice

- Screws (8 count) for wall mounting are not included. Please purchase screws with a size of M6, appropriate for your type of wall (page 42).

Wall Mounting Construction

Checking the Wall

When mounting on a wall, consult with your building's owner, caretaker or construction manager to determine if the wall strength is sufficient to install the elite Panaboard. For safety, install the elite Panaboard only after thoroughly understanding the type of walls, the appropriate types of screws and the construction method (page 42).

CAUTION

Do not attach the electronic board to mortared walls. Accidental electric leakage from the wall mounting plate bolts to metal laths or wire laths can cause heat, smoke or fire.

I. Necessary Tools and Parts (not included with the elite Panaboard)

Drill, Phillips-head screwdriver, Flat head screwdriver, Measuring tape, Level
8 screws (M6 size)

II. Before Starting

1. Make sure that the wall is strong enough to support the elite Panaboard.

Rated strength: greater than 1,962 N (200 kgf)

Notice

- If necessary, reinforce the wall so that it is strong enough to support the elite Panaboard.

2. Make sure that the location is large enough to accommodate the elite Panaboard.

Height: greater than 2,100 mm (6 ft. 10 ⁵/₈ in.)


Width: greater than 2,000 mm (6 ft. 6 ³/₄ in.)

3. Make sure that the AC outlet is within 3 m (9 ft. 10 ¹/₈ in.) of where the elite Panaboard will be mounted and that it will not be behind the elite Panaboard.


Installing the Wall Mounting Plates

1. Ensure that the wall is strong enough to support the elite Panaboard.
Rated strength: greater than 1,962 N (200 kgf)
2. Using the measuring tape and level, mark the 8 locations to insert the screws.

UB-T880E

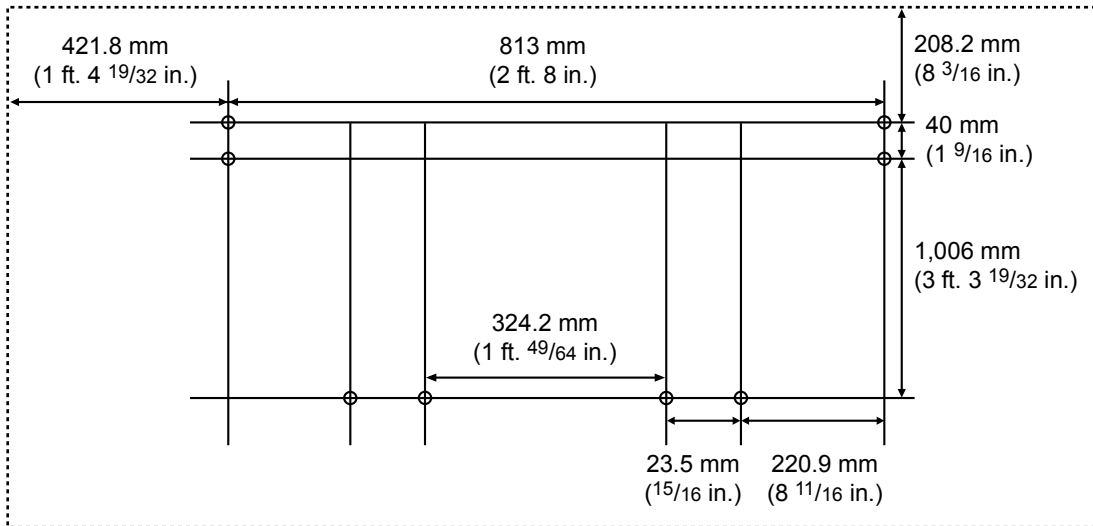

UB-T880EW

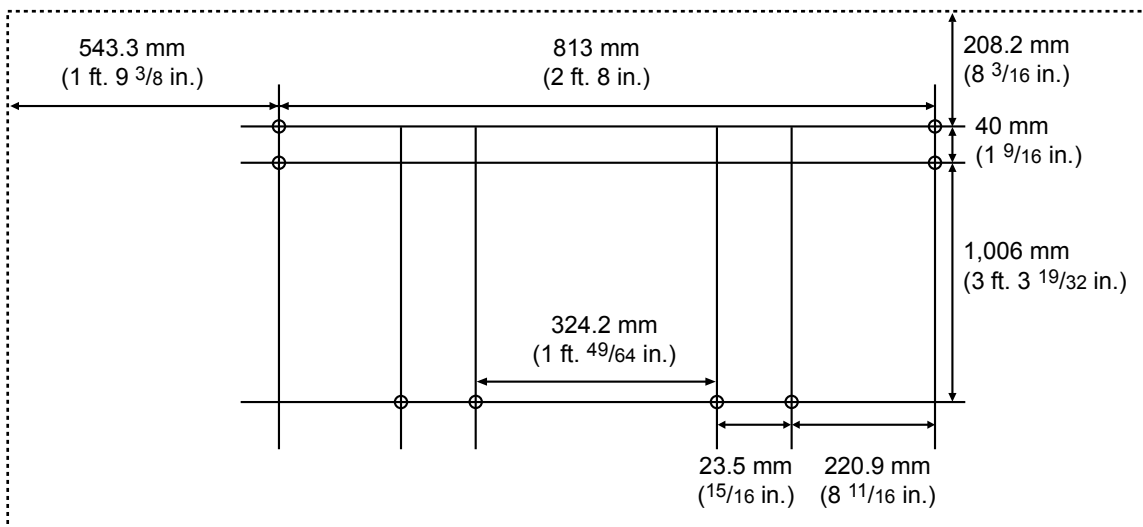

Note

- The dotted line in the illustration represents the outer edge of the elite Panaboard.


3. Drill 8 holes for the wall mounting plates.

- Drill holes that are appropriate for the screws you are using.

4. Install the wall mounting plates using the 4 screws.

- 2 screws are used for each wall mounting plate. The remaining 4 screws are used after installing the elite Panaboard on the wall (page 50).

UB-T880E / UB-T880EW

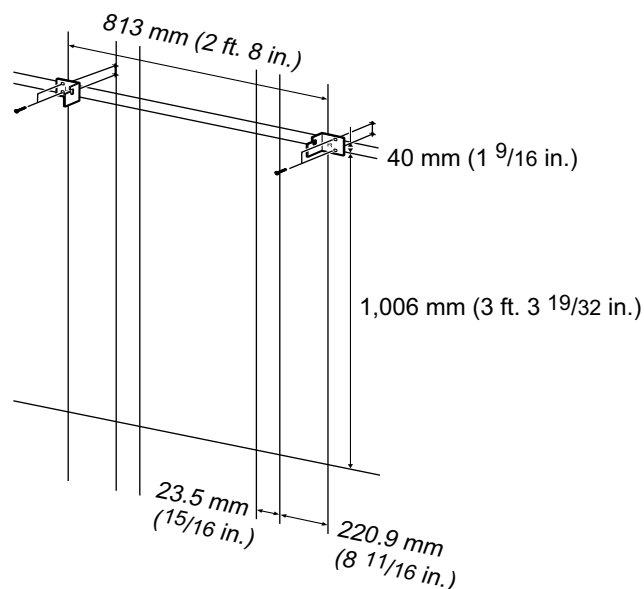

- Screws (8 count) are not included with the elite Panaboard. Please purchase screws with a size of M6, appropriate for your type of wall.
- Tighten the bolt so that it will not become loose.
- When drilling the holes and installing the wall mounting plates, follow the procedure in “Wall Types and Installation Procedures” (page 42).

5. Mount the elite Panaboard on the wall.


- See “Assembling the elite Panaboard” (For Wall Mounting → page 49).

Wall Types and Installation Procedures

The method for attaching the wall mounting plates to the wall will vary depending on the wall's structure. Three available options are listed below. Other methods may be necessary depending on the wall.

Metal or Concrete walls

Stud plugs (not included) are needed.

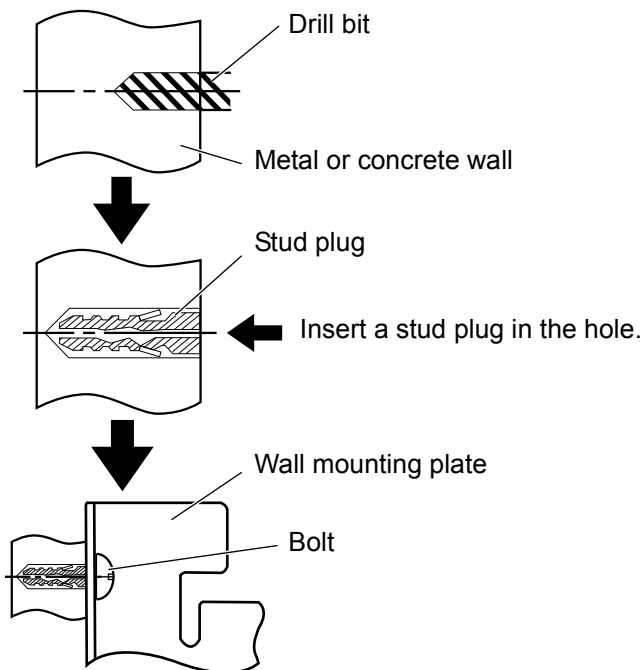


Drill 8 holes in the wall.
For the correct hole size, refer to the instructions for the particular stud plugs used.

Insert the bolt through the hole in the wall mounting plate and tighten until the wall mounting plate is securely fixed to the wall.

Plasterboard walls

Split-wing toggles (not included) are needed.

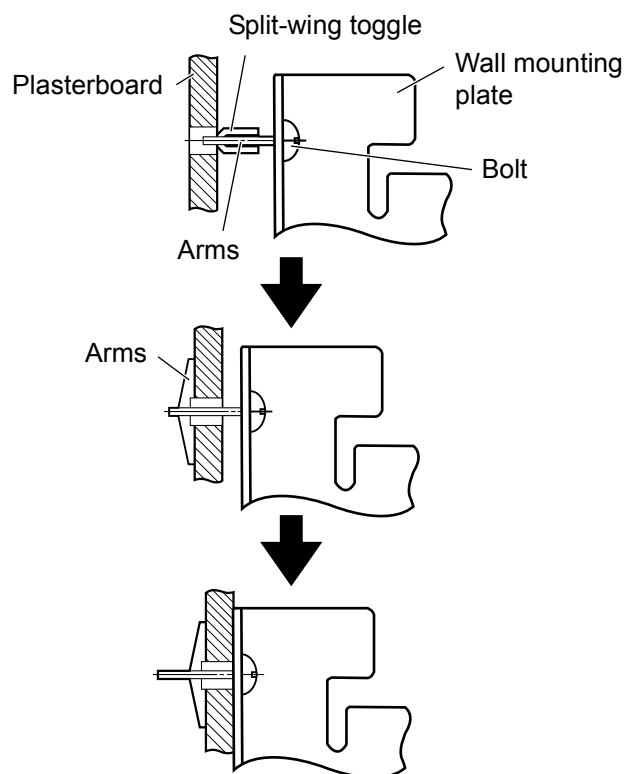

Insert the bolt through the hole in the wall mounting plate and into the hole in the wall so that the arms of the split-wing toggle are horizontal.


For the correct hole size, refer to the instructions for the particular split-wing toggles used.

After the arms expand, pull the wall mounting plate out until the arms of the split-wing toggle grip firmly into the wall.

Tighten the bolt until the wall mounting plate is securely fixed into the wall.

Wooden walls

Wood screws (not included) are needed.

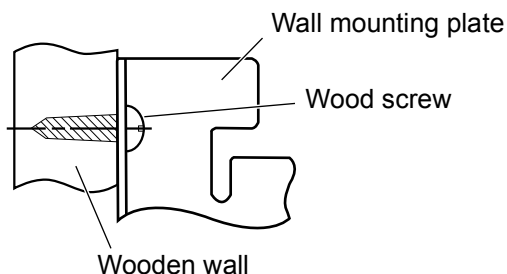

Insert the wood screw through the hole in the wall mounting plate and tighten until the wall mounting plate is securely fixed to the wall.

For the correct hole size, refer to the instructions for the particular wood screws used.

 
 


 


 
 

 

Notice

- When mounting onto a thin panel, use reinforcing material and mount in the same manner as when mounting on plasterboard walls.

Stand KX-B061 Assembly (Sold Separately)

Included Parts

Check that the following parts are included with the stand KX-B061.


No.	Part Name	Illustration	Q'ty
①	Stand Base		2
②	Support Beam		2
③	Cross Bar (A)		2
④	Cross Bar (B)		1
⑤	Screw (M6 × 45 mm [1 3/4 in.])		10
⑥	Two-wing Bolt (M5 × 12 mm [1/2 in.])* ¹		2
⑦	Support Bracket		2
⑧	Fall-prevention Extension Leg		4
⑨	Screw (M6 × 60 mm [2 3/8 in.])		4
⑩	Nut		4
⑪	Wrench* ²		1
⑫	Washer		10

*¹ Use the two-wing bolts (⑥) when securing the elite Panaboard to the stand.

*² The included wrench is necessary for tightening and loosening the screw (⑤), so keep it in a safe location.


CAUTION

Before assembly, be sure to lock the casters.

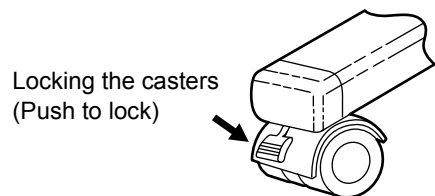


Assembly Instructions

1. Assemble the fall-prevention extension legs.

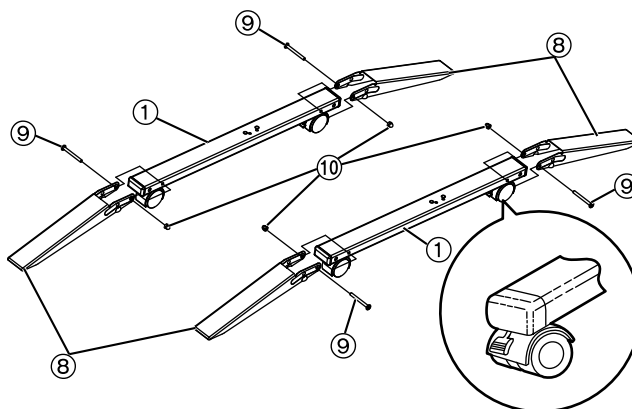


2. Assemble the stand.

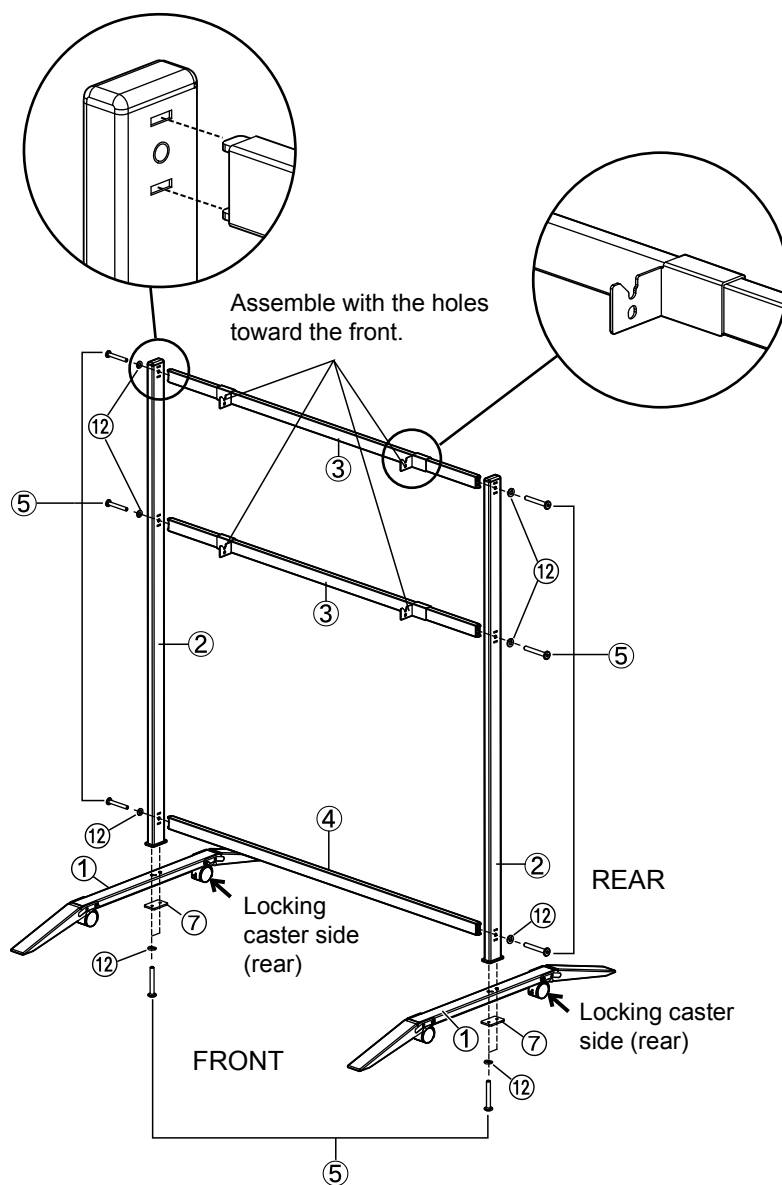

Notice



- Do not over-tighten the screw (5). (Doing so can warp the support beams.)
- Assemble the stand so that the locking casters are on the rear side.

3. Pull the fall-prevention extension legs down.

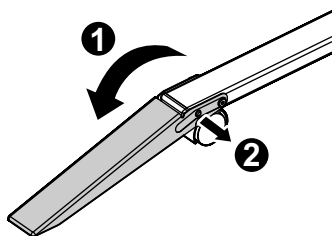

Note

- When folding back the fall-prevention extension legs, release the lock as follows (1, 2).

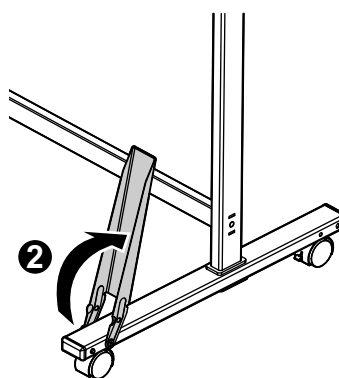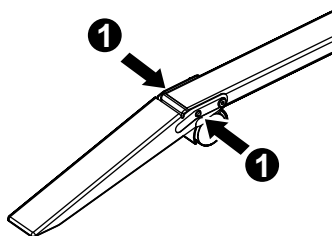


4. Mount the elite Panaboard.

- See “Assembling the elite Panaboard” (For Mounting on a Stand KX-B061 (Sold Separately) → page 52).

Assembly Instructions

Preparing for Removing the elite Panaboard from Its Packaging

Remove the 10 joints, open the box, remove the accessory box & packing foam and open the plastic sheet of the elite Panaboard.

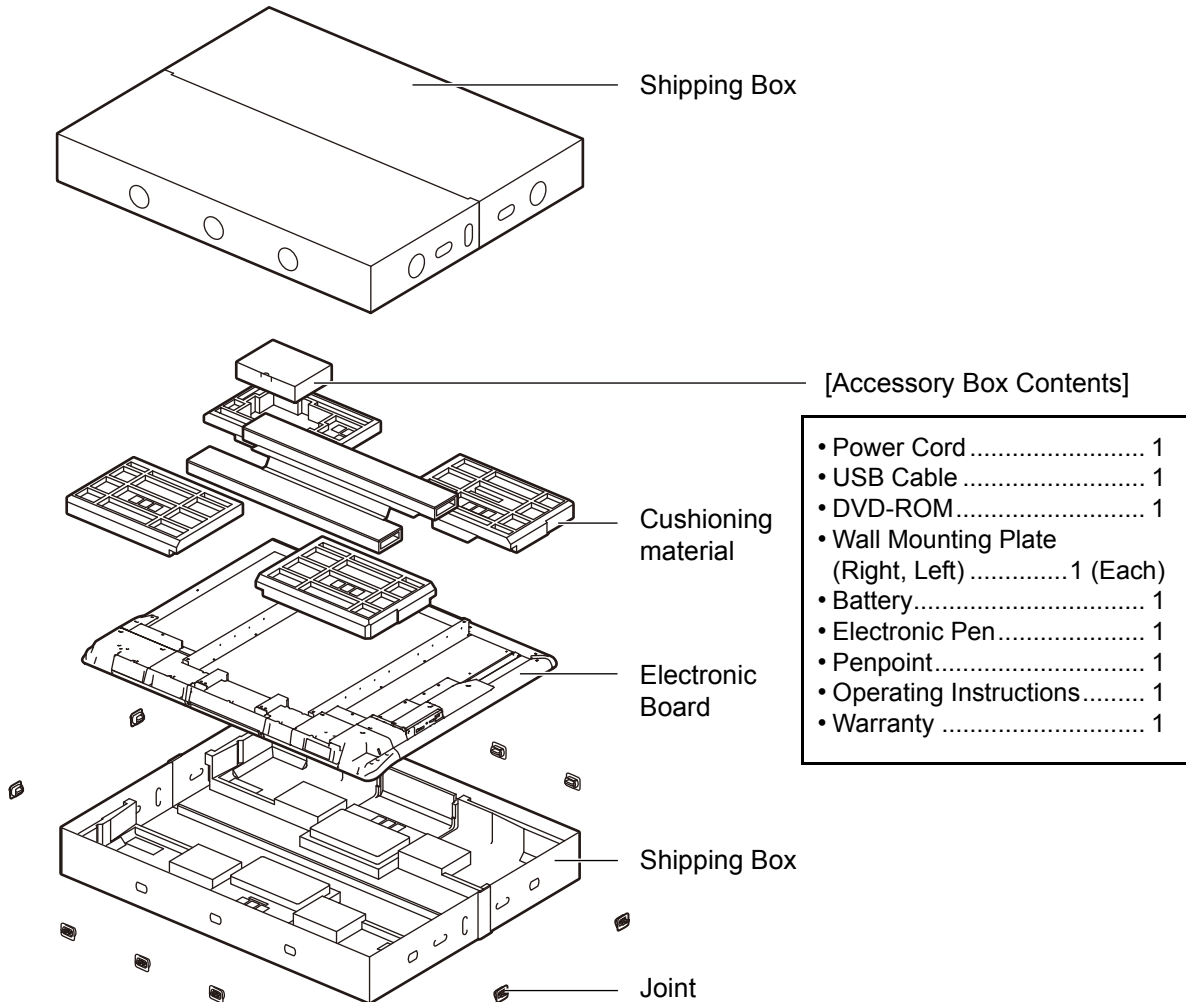

Notice

- When handling the electronic board, hold it by the edge frame and not the screen board. (Holding the screen board can result in damage.)
- The packing materials in the shipping box are necessary for repackaging, so keep them in a safe place.


Note

- The warranty may not be included depending on country/area.

Assembling the elite Panaboard For Wall Mounting


1. Attach the power cord.

- Connect the power cord to the elite Panaboard before installing on a wall.

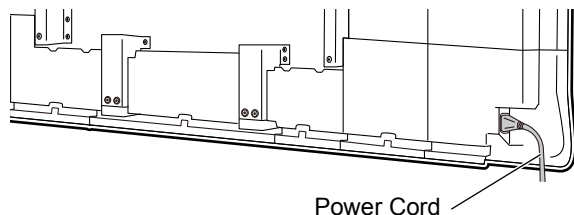


2. Depending on the location of the outlet, install the power cord as illustrated in the following diagrams.

- When attaching the power cord downward.

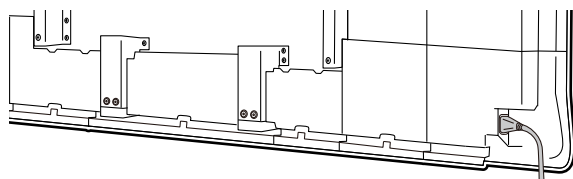


- When attaching the power cord along the lower side of the elite Panaboard.

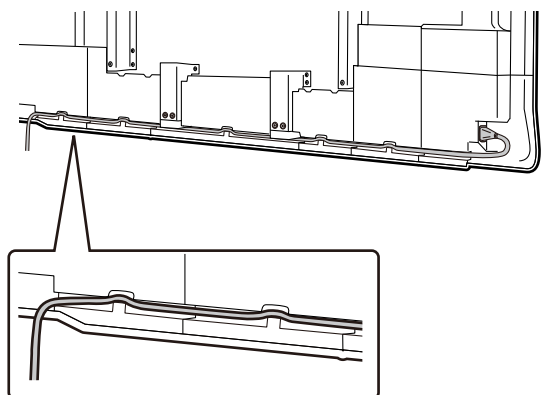


3. Remove the push-turn rivets (4) on the fasteners on the bottom of the board.

- Turn the push-turn rivets counter-clockwise with a Phillips-head screwdriver. When the fastener pops up, the part can be removed.

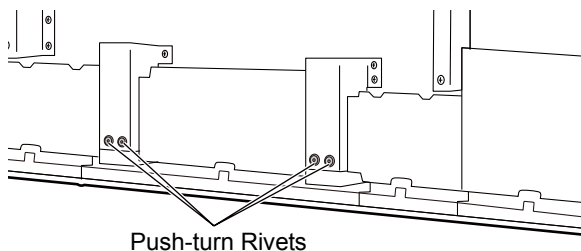


4. Hang the elite Panaboard on the wall mounting plates with the screw heads.

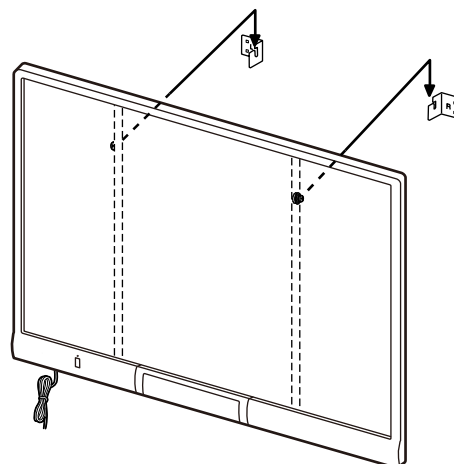

5. Remove the screws on each end of the bottom of the lower frame cover.

- UB-T880E: 2 screws,
UB-T880EW: 4 screws
(UB-T880E is shown in the following figure as an example.)

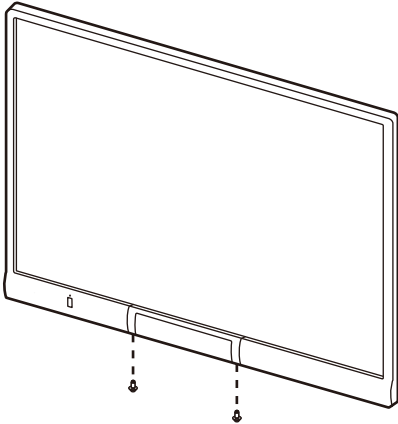


6. Open the pen tray, remove the screw caps and the screws, and remove the lower frame cover.

- Open the pen tray (❶), and remove the right and left screw caps (2 locations). Then, remove the screws, and remove the lower frame cover (❷).


Notice

- When removing the screw caps, hold them with your finger to prevent them from flying off.

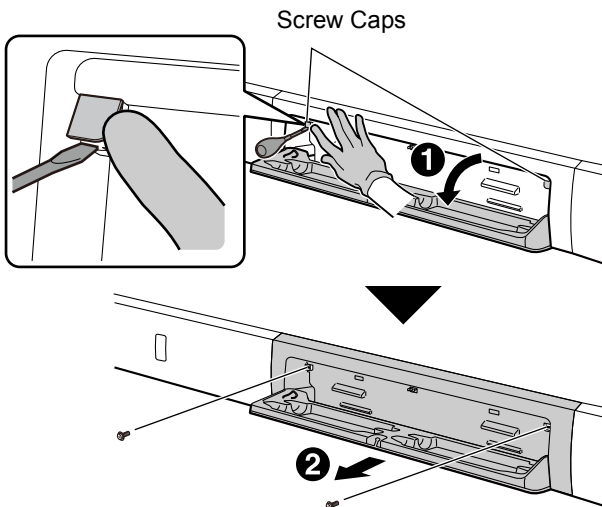

7. Fasten to the wall.

- Use 4 screws to attach the fasteners on the bottom of the board securely to the wall.

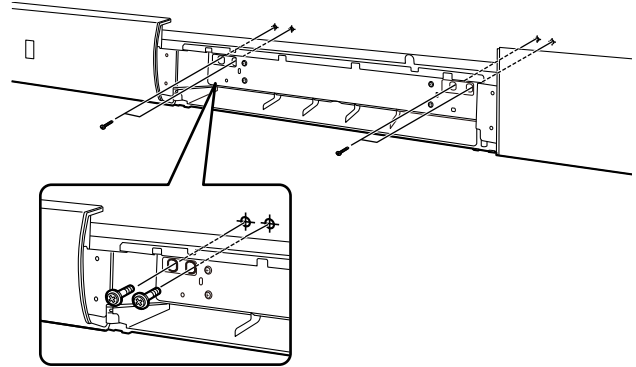

Notice

- Screws (4 count) are not included with the elite Panaboard. Please purchase screws with a size of M6, appropriate for your type of wall.

8. Attach the lower frame cover.

- Perform step 6 and step 5 in reverse and attach the lower frame cover, making sure there is no unevenness with the front surface.

Notice

- When mounting on a wall, do not hit or jolt the elite Panaboard.
- After mounting, gently apply some weight on the elite Panaboard to make sure that it is securely fastened to the wall.


9. Confirm that the elite Panaboard can operate.

- See "Confirming the elite Panaboard Operation" (page 54).

10. Turn off the power switch and unplug the power cord from the AC outlet.

11. Wipe the screen board surface.

- Gently wipe the screen board surface with a soft, moist cloth.

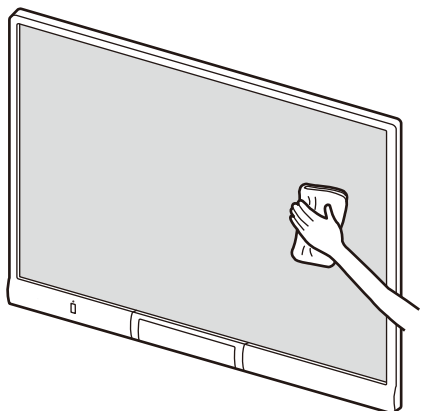


Notice

- Do not use thinner, benzene, or abrasive chemicals to clean.
(Doing so can result in discoloration.)
- Do not wipe the screen board with a dry cloth.
(Doing so can cause static electricity build-up.)

For Mounting on a Stand KX-B061 (Sold Separately)


1. Attach the power cord.

- Connect the power cord to the elite Panaboard before installing on the stand.

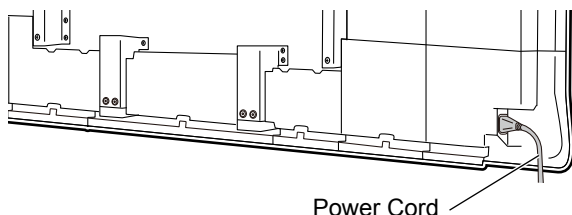


2. Depending on the location of the outlet, install the power cord as illustrated in the following diagrams.


- When attaching the power cord downward.

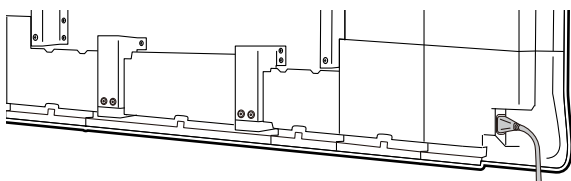


- When attaching the power cord along the lower side of the elite Panaboard.

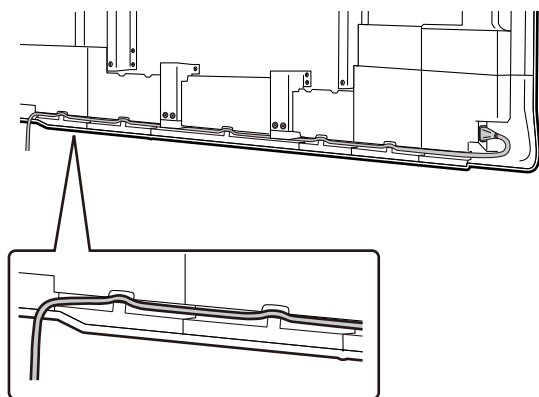

3. Hang the elite Panaboard on the stand with the screw heads.

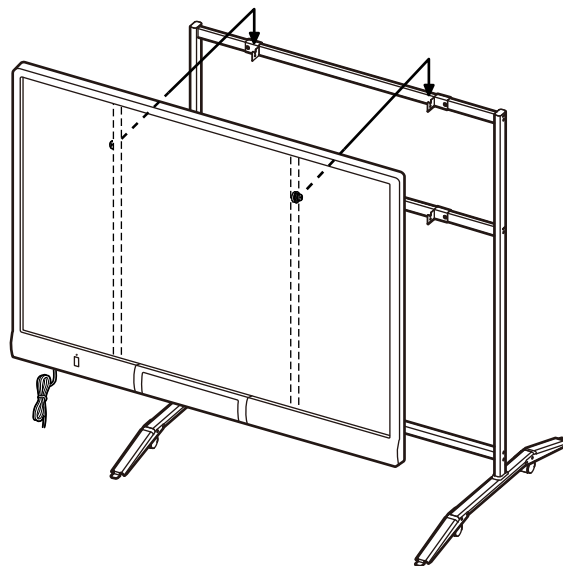

4. Secure the elite Panaboard to the stand frame using the two-wing bolts (M5 × 12 mm [1/2 in.] [2 count]) included with the stand.

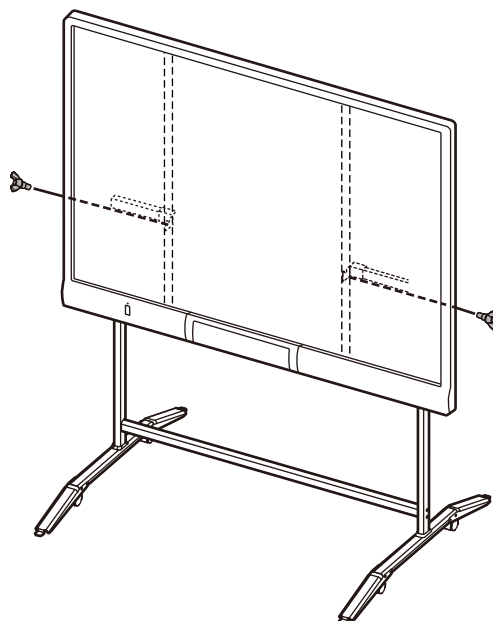


- When installing the elite Panaboard on the stand, you can adjust its height to 4 different levels.

When changing the height, remove the left and right screws from the back of the elite Panaboard, and securely insert them at the desired height. Torque (greater than 1 N•m [10 kgf•cm (9 lbf•in.)]).

elite Panaboard Height	Screw Position
-100 mm (-3 7/8 in.)	Highest
Standard	2nd from top
+100 mm (+3 7/8 in.)	2nd from bottom
+200 mm (+7 7/8 in.)	Lowest

- 5. Confirm that the elite Panaboard can operate.**
 - See “Confirming the elite Panaboard Operation” (page 54).
- 6. Turn off the power switch and unplug the power cord from the AC outlet.**
- 7. Wipe the screen board surface.**
 - Gently wipe the screen board surface with a soft, moist cloth.

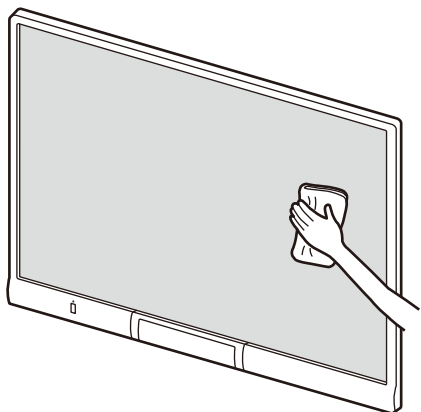

Notice

- Do not use thinner, benzene, or abrasive chemicals to clean.
(Doing so can result in discoloration.)
- Do not wipe the screen board with a dry cloth.
(Doing so can cause static electricity build-up.)


Confirming the elite Panaboard Operation

After assembling the elite Panaboard, confirm that it operates properly by following the procedure below.

Action		Checkpoints	
		Operation	Measure
1	Turn on the power.	Power LED (green) lights.	(Normal operation)
		Power LED (green) does not light, or Error LED (red) is blinking.	Check the power cord. See step 1 of “Assembling the elite Panaboard”. • For Wall Mounting → page 49 • For Mounting on a Stand KX-B061 (Sold Separately) → page 52

Confirming the Interactive Features

- Following the procedure in “Installing the Software” (page 22), install the software and connect the included USB cable.
- Confirm that the interactive features are operating correctly.
 - If a projector is not available, confirm operation using only the elite Panaboard and computer.
 - When the elite Panaboard software starts, the calibration screen is displayed on the computer screen.
 - Perform tentative calibration by touching the locations on the elite Panaboard that correspond to the points displayed on the computer screen in the order shown for about 2 seconds each. For precise adjustment, it is necessary to use a projector.

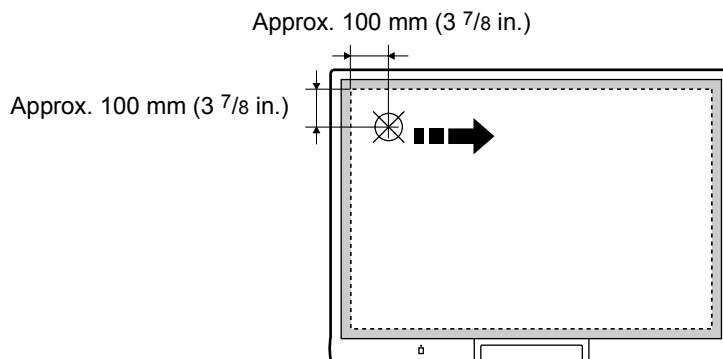

- Confirm operation by writing on the screen board with the electronic pen and checking that the writing is displayed on the computer's screen. (Your writing with the electronic pen will not appear on the screen board itself.)

Repackaging

To repack the elite Panaboard, perform steps in the following “Assembling the elite Panaboard” in reverse.

- For Wall Mounting → page 49
- For Mounting on a Stand KX-B061 (Sold Separately) → page 52

Package the unit as depicted in the diagram in “Preparing for Removing the elite Panaboard from Its Packaging” (page 48).

Notice

- When handling the electronic board, hold it by the edge frame and not the screen board. (Holding the screen board can result in damage.)

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union



If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Cd

Panasonic System Networks Company of America
Unit of Panasonic Corporation of North America
One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

Panasonic Business Systems U.K.
A Division of Panasonic U.K. Ltd.
Willoughby Road, Bracknell, Berkshire, RG12 8FP

Panasonic Marketing Europe GmbH
Hagenauer Strasse 43, 65203 Wiesbaden, Germany

For information of Compliance with EU relevant Regulatory
Directives, Contact to Authorised Representative:
Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

Panasonic Corporation
Web Site: <http://www.panasonic.net/>



PNQX3705ZA F0311E0
Printed in Malaysia